


AUTOMIX & VEXVE OPTIONAL HEATING FLOW CONTROLLER OPTIONS;

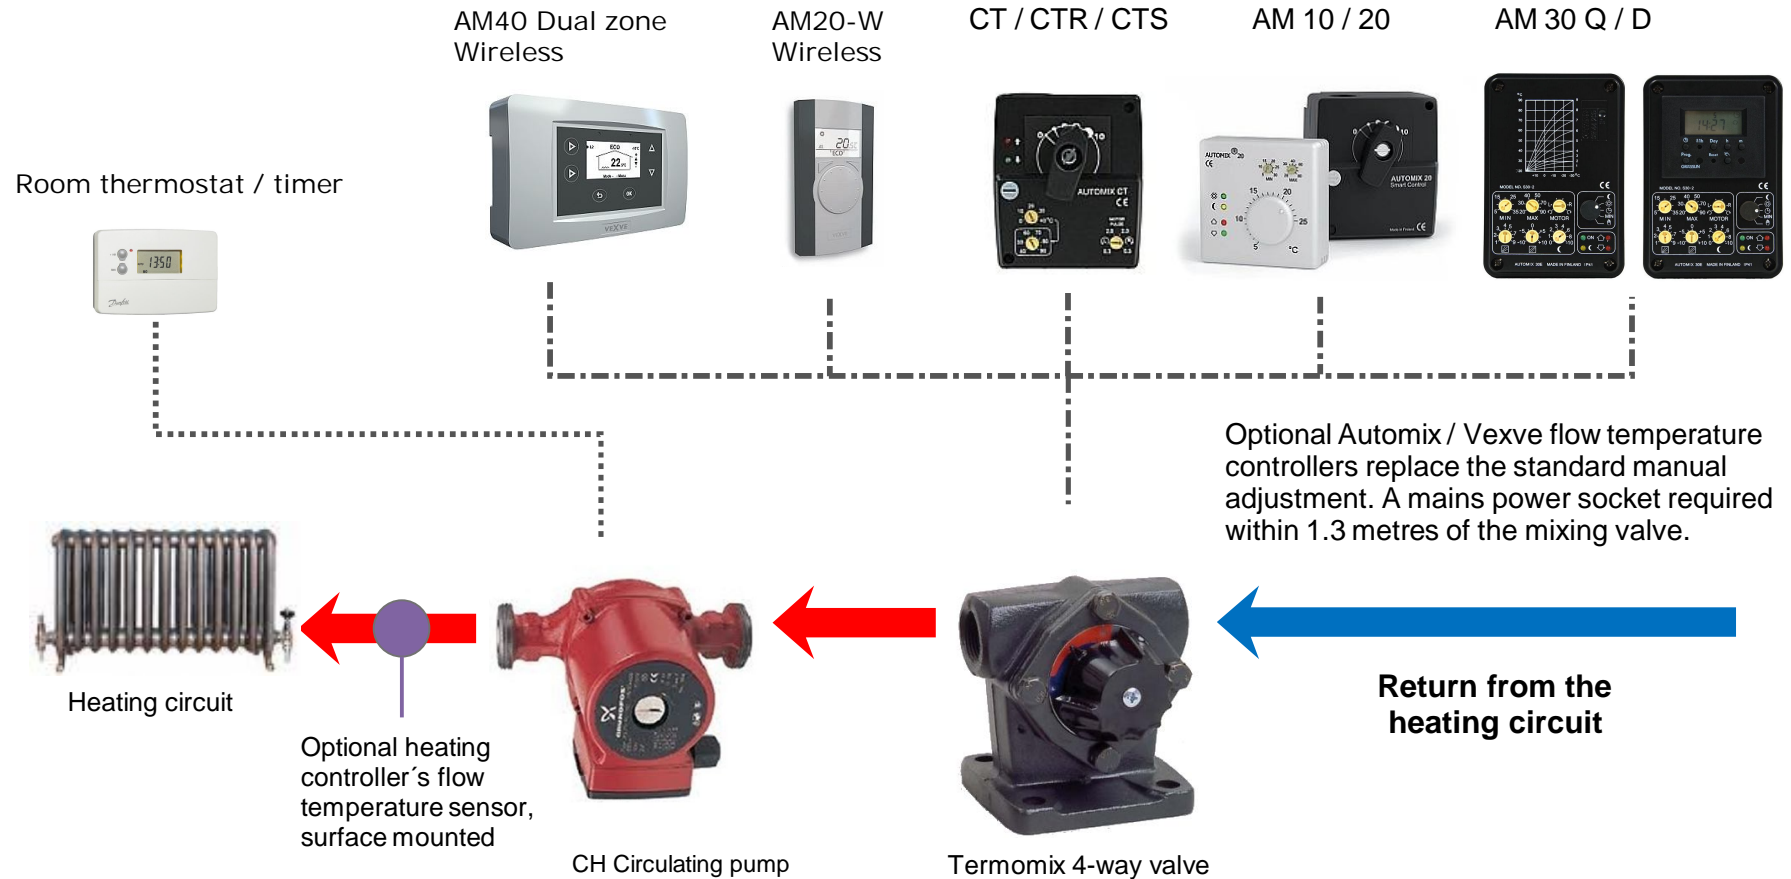

NOTE
 Valve flow direction is from right to left as standard. Flow can be changed to the opposite direction, please refer to the valve installation instructions.

NORTHMAN		VEXVE	
MULTI ENERGY BOILERS MIXING VALVE & HEATING CONNECTION			
DRAWN	VERSION	DATE	DRAWING REF.
SS		01.02.2012	GENERIC